

# **MSD** INSTALLATION INSTRUCTIONS

## **Inductive Sync Pickup PN 7555**

**ONLINE PRODUCT REGISTRATION:** Register your MSD product online. Registering your product will help if there is ever a warranty issue with your product and helps the MSD R&D team create new products that you ask for! Go to [www.msperformance.com](http://www.msperformance.com).

### **Parts Included:**

- 1 - Inductive Sync Pickup
- 1 - 12-feet of Fiber Optic Cable with Sleeve
- 1 - Tie Wrap

The Inductive Sync Pickup provides an easy and reliable way to obtain a synchronization signal for MSD's Digital Programmable Ignitions and Accessories. The pickup simply slides over the number one spark plug wire and senses each firing of the spark plug. The fiber optic cable connects to the MSD Control while providing a clean signal that will not interfere with other electronics. No phasing or alignment is required with this pickup.

**Note:** It is not recommended to cut the fiber optic cable. If the cable is too long, it is preferred to loop the cable and secure it.

1. Route the number one spark plug wire through the pickup. It is best to position the pickup, close the distributor. Secure the pickup with the supplied wire tie.
2. Insert the fiber optic cable into the Pickup. Snug the cinch nut – do not overtighten!
3. Route the cable to the Ignition Control. Use care to keep the cable away from engine heat sources, edges and moving parts. Snug the cinch nut – do not overtighten!

If your fiber optic cable is ever damaged, MSD offers replacement PN 75562.



